

ACP Programming Application General User Guide



Use the ACP Programming Application to create and organize menu item information from your computer.

For Touchscreen models, please see separate user guide, available at acpsolutions.com/oven-programming/.

 
 
Download and Install:

1. Open an internet browser and go to acpsolutions.com/oven-programming/.
2. Select the appropriate ACP Programming Application download. (*Windows Download* or *Mac OS Download*) Your download will begin.
3. Open and install the downloaded ACP Programming Application:
 - **Windows:**
 - i. Locate the downloaded file.
 - ii. Click to launch the extracted file.
 - iii. Follow prompts to install the application in your C:\Program Files folder
 - **Mac OS:**
 - i. Locate the downloaded file.
 - ii. Drag and drop the file into your Applications folder
 - iii. Follow prompts to install the application



Getting Started:

1. Launch the application
 - **Windows:** Open “ACP Remote Programming Interface” from your Program Files, or the Start Menu shortcut: “ACP>ACP Remote Programming Interface”
 - **Mac OS:** Open the “ACP_Application.app” file
2. Start a New menu from scratch (**a**), or Open an existing menu (**b**):
 - a. **Create New Menu:**
 - i. Click “File”, then “New.”
 - ii. Select the appropriate model
 - b. **Open Existing Menu:**
 - i. Select “File,” then “Open.”
 - ii. Navigate to the location of your menu file** and open it

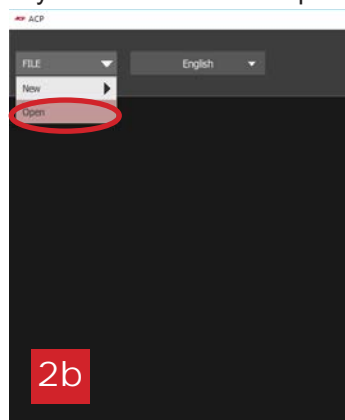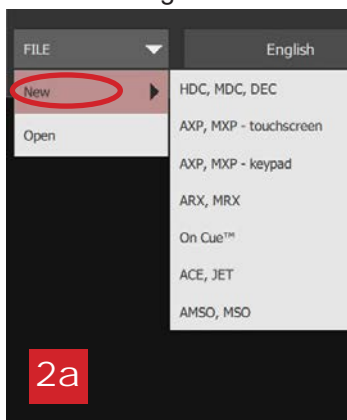


ACP Programming App version is subject to change.
Please use most recent release when available.

** .xml or .mxp file format for touchscreen models
.xml file format for LCD HDC/MDC/DEC display models
.acp file format for all other models.

Change User Options:


1. To change the language, select from the top-right dropdown.
2. Click on the *User Options* tab to access a variety of customizable settings.

 Note: Available User Options vary with each model

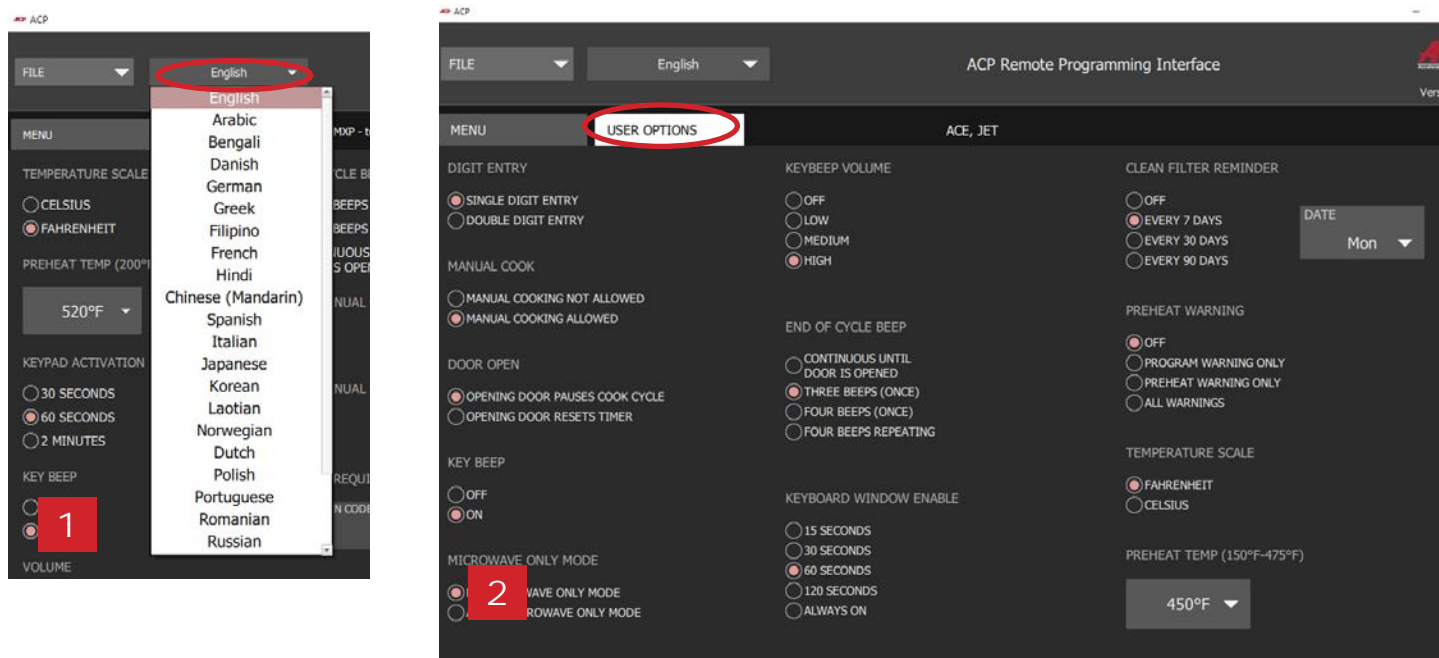

Create/Edit a New Recipe:

 1. Select the *Menu* tab.
2. Click on the Menu Item you would like create or edit.
3. Use the icons and menus to customize temperature, time, etc.*
*Select "No Preheat" under the "Temperature" menu to cook with microwave only. (For ACE, JET, AXP, MXP, ARX, or MRX only)

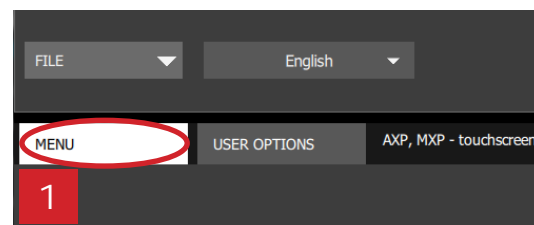

Save Menu Information

1. Save menu:
 - a. To save as a *new menu file*, select "File," then "Save As." or
 - b. To save changes to *existing menu file*, select "File," then "Save."
2. Navigate to the USB flash drive.
3. Specify a File Name* for the new menu. Click "Save."

Notes:

- For touchscreen models there are no restrictions on file names.
- For LCD HD display ovens, there are no restrictions on file names. Files will be saved in XML format.
- For LCD HD display HDC, MDC, and DEC; and legacy LED display ovens: Oven will load the first recipe file on USB flash drive. It is recommended that only 1 recipe file be saved on a USB flash drive for these ovens.
- For all other models, files must be tagged with "ACP" and can only be transferred via USB.2

For specific instructions on how to upload files to your oven, please see your model's Owner's Manual. Owner's Manuals available online at acpsolutions.com/product-literature/

